

# KB1700 Legend Sheet Description

Options	Image
A (Default)	<p>KB1700 keypad layout A (Default) features a top row of six function keys: Ctrl (red), a yellow key with a minus sign, a blue key with a plus sign, an orange key with a right arrow, a green key with a right arrow, and Sp (yellow). The bottom row consists of numeric keys 0 through 9 and a left arrow key.</p>
B	<p>KB1700 keypad layout B features a top row of six function keys: BUMP (red), RECALL (yellow), SUM (blue), PAGE (orange), a green key with an up arrow, and a yellow key with a down arrow. The bottom row consists of numeric keys 1 through 10 and a RECALL key.</p>
C	<p>KB1700 keypad layout C features a top row of six function keys: BUMP ITEM (red), a yellow key with a left arrow, a blue key with a right arrow, an orange key with an up arrow, a green key with a down arrow, and BUMP TICKET (yellow). The bottom row consists of numeric keys 0 through 9 and a MENU key.</p>
D or PH	<p>KB1700 keypad layout D or PH features a top row of six function keys: Bump (red, Ctrl), Recall (yellow), Scroll (blue), Mode (orange), Home (green), and Summary (yellow, Sp). The bottom row consists of a 0/10 key, numeric keys 1 through 9, and a left arrow key.</p>
E	<p>KB1700 keypad layout E features a top row of six function keys: VIEW (blue, X), PARK (red, up arrow), LANGUAGE (orange, down arrow), ZOOM (pink), RECALL (green), and BUMP (yellow, checkmark). The bottom row consists of a RESET key, numeric keys 1 through 8, and left and right arrow keys.</p>
G	<p>KB1700 keypad layout G features a top row of six function keys: Bump Item (grey), Recall (blue), Summary (orange), Park/Serve (light blue), In Progress (dark blue), and Menu (red, X). The bottom row consists of numeric keys 0 through 9 and a left arrow key.</p>
IN	<p>KB1700 keypad layout IN features a top row of six function keys: Bump Order (red), Recall (blue), Summary (pink), a green key with an up arrow, a green key with a down arrow, and Bump Item (red, left arrow). The bottom row consists of Menu (grey), Info (grey), numeric keys 1 through 8, and a Mode key.</p>

K	 <p>The image shows a control panel for iBISTRO QSR. It features a grey background with the logo 'iBISTRO QSR' in the top left. Below the logo are four small grey boxes labeled 0, 4, 5, and CTRL. The panel is divided into two main sections: 'BOTTOM' (left) and 'TOP' (right). The 'BOTTOM' section has four blue buttons: a left arrow, a right arrow, 'RECALL', and 'BUMP'. The 'TOP' section has four green buttons: a left arrow, a right arrow, 'RECALL', and 'BUMP'. The 'WINCOR NIXDORF' logo is in the bottom right corner.</p>
DP	 <p>The image shows a DP control panel with a black background. The top row contains six colored buttons: 'BUMP' (cyan), 'UNBUMP' (blue), 'NEXT' (red), 'BACK' (orange), 'PAGE Next Dine In' (yellow), and 'ENTER DISPLAY' (green). The bottom row contains a numeric keypad with buttons for digits 1 through 8, 'Mode', 'Login', and 'Quit'.</p>